

# **Projector FAQ**

(Any question, please contact us at: drjprofessional@163.com)

#### Part 1:

- 4 Projection Methods: Depending on how you positioned the projector, you may need to change the projection mode so your images project correctly.
- 1.1 Factory defaults: Front lets you project from a table in front of the screen.

 






1.2 Rear: Flips the image horizontally to project from behind a translucent screen.

You can change the projection mode (Flip) using the remote control or by changing the Projection setting by Click MENU -> SETTING -> PICTURE -> Projection Mode (Flip) like following pictures:



 












# Front / Ceiling






(1





(3

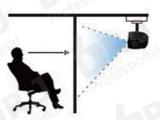

Rear/ Ceiling



#### Part 2:

# How to use HDMI cable display a computer / PS4/xbox /dvd image on projector?

# 2.1 Identifying available connections

The first step in connecting your computer to projector is finding an identical port on both machines. Once the matching port has been identified (one that is the same on both your input device and output device), you need the appropriate cable to connect them.

# 2.2 Please find following picture for your reference:



# Use HDMI connect to laptop:





2

(3)

# Use HDMI connect to XBOX:







1

# Please note that you should choose PCM on your device.



2

## Use Type C/Mini DisplayPort to HDMI adapter to connect HDMI to Macbook:





# Use HDMI connect to Amazon Fire TV:





 
#### Part 3:

# Connect your iPhone, iPad, Android Smartphones to projector

- 3.1 Make sure your device supports MHL, you can connect an MHL to HDMI adapter to the device, then connect it to the HDMI port on the projector.
- 3.2 For Android smartphones, please use a Wireless HDMI Dongle or android to HDMI Adapter
- 3.3 For ios device, please use a Lightning to HDMI Adapter
- 3.4 Please find following picture for your reference:









Part 4:

# Connecting a USB Device or TF card to the Projector

- 4.1 You can connect your USB device or TF card to the projector's USB port and use it to project images and other content.
- 4.2 Connect the USB cable (or USB flash drive or USB memory card reader) to the projector's USB port .
- 4.3 Connect the other end of the cable (if applicable) to your device.

# 4.4 Please find following picture for your reference:



# Please note you need to click source button and choose DMP



(2)

#### Part 5:

### How to Play a Video in Full Screen Mode?

- 5.1 Firstly, you need to choose DMP source
- 5.2 Go to movie, go to your flash drive, choose the photo a video that you want to play
- 5.3 If you want to play video and photo in a Full Screen mode, please click the

(SOURCE) button again.

(Please feel free to see the FAQ video on YouTube by search: DR.j Projector: How To Play a Video In Full Screen Mode)

5.4 Please find following picture for your reference:



#### Part 6:

## **Correcting Image Shape with the Keystone Buttons**

- 6.1 You can use the projector's keystone correction buttons to correct the shape of an image that is unevenly rectangular on the sides.
- 6.2 Please find following picture for your reference:



#### Part 7:

# **Remote Control doesn't work**

- 7.1 Point the remote control at the front of the projector or at the screen.
- 7.2 Stand within 10 feet of the projector.
- 7.3 Please find following picture for your reference:



(Any question, please contact us at: drjprofessional@163.com)