

**X14**

Frame size 7"x14"  
Designed for kids  
and gear up to 100 lbs.

**X21**

Frame Size: 8"x21"  
Designed for wearer  
and gear up to 150 lbs.

**X25**

Frame Size: 8"x25"  
Designed for wearer  
and gear up to 200 lbs.

**X27**

Frame size: 8"x27"  
Designed for wearer  
and gear up to 220 lbs.

**X30**

Frame size 9"x30"  
Designed for wearer  
and gear up to 250 lbs.

Size	Length	Width	Capacity
14"	14 inch	7 inch	30 - 70 lbs
21"	21 inch	8 inch	70 - 150 lbs
25"	25 inch	8 inch	120 - 180 lbs
27"	27 inch	8 inch	175 - 225 lbs
30"	30 inch	8 inch	180 - 250 lbs

**HOW TO WEAR:**

- You can tell the left from the right by placing buckles on the outside of the boot.
- Step into binding.
- Adjust straps to desired tension starting with toe strap and moving back.
- Center heel guard on boot and tighten heel strap.
- To remove, simply release rear buckle and step out.

**WARRANTY**

No-hassle warranty against manufacturer's defect.

**SATISFACTION GUARANTEE**

Our products are made from the best materials and built to stand up. We will repair or replace any part of an ALPS snowshoe or binding for the original purchaser if it is found to be defective in workmanship or materials for up to one year from the date of purchase.




Strap



Buckle



Ratchet bindings

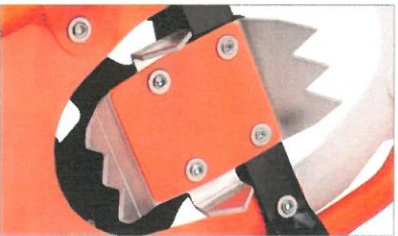

Crampon



